

SERVICING YOUR GENERATOR

MAINTENANCE SCHEDULE

REGULAR SERVICE PERIOD (3) Perform at every indicated month or operating hour interval, whichever comes first.		Each use	First month or 10 Hrs.	Every 3 months or 50 Hrs.	Every 6 months or 100 Hrs.	Every 2 years or 300 Hrs.	Page
ITEM							
Engine oil	Check level	○					45
	Change		○		○		47
Air cleaner	Check	○					49
	Clean			○(1)			50
Spark plug	Check-adjust				○		51
	Replace					○	51
Spark arrester	Clean				○		53
Valve clearance	Check-adjust					○(2)	—
Combustion chamber	Clean	After every 300 hrs. (2)					—
Fuel tank and filter	Clean	Every year (2)					—
Fuel tube	Check	Every 2 years (Replace if necessary) (2)					—

(1)Service more frequently when used in dusty areas.

(2)These items should be serviced by your Honda servicing dealer, unless you have the proper tools and are mechanically proficient. Refer to the Honda shop manual for service procedures.

(3)For commercial use, log hours of operation to determine proper maintenance intervals.

Failure to follow this maintenance schedule could result in non-warrantable failures.